

# MINI

— switch

USER MANUAL

**strymon**<sup>®</sup>

## Table of Contents

|                                    |    |
|------------------------------------|----|
| Connect to Your Strymon Pedal..... | 3  |
| BigSky.....                        | 5  |
| Brigadier.....                     | 6  |
| Compadre.....                      | 7  |
| Deco .....                         | 8  |
| DIG.....                           | 9  |
| El Capistan.....                   | 10 |
| Flint.....                         | 11 |
| Iridium.....                       | 12 |
| Lex.....                           | 13 |
| Mobius.....                        | 14 |
| Riverside.....                     | 15 |
| Sunset.....                        | 17 |
| TimeLine.....                      | 18 |
| Volante.....                       | 19 |
| Specifications & Warranty.....     | 20 |

## Connect to Your Strymon Pedal

Connect MiniSwitch to the expression or boost jack of your Strymon pedal with the included TRS cable.




## Connect to Your Strymon Pedal (cont.)

### Operation & Set-up for Products with Toggle Switches

With MiniSwitch, you can place your pedal anywhere on your board to access a Favorite preset, engage a volume boost, or tap in your tempos remotely. Perfect for large rigs or boards with pedals fighting for real estate.


Remove the back cover of your MiniSwitch to gain access to the internal jumper. Select either FAV / BOOST MODE or TAP TEMPO mode.

\*Close up view of circuit boards.

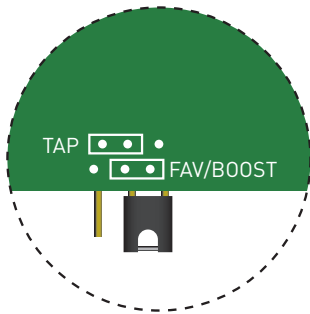

#### FAV / BOOST MODE

Place the jumper on the RIGHT 2 pins. (this is how MiniSwitch ships from the factory).

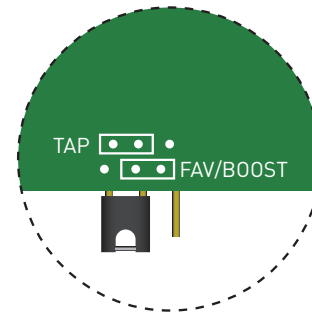

#### TAP TEMPO MODE

Place the jumper on the LEFT 2 pins.

## MiniSwitch Functionality Overview

### Pedals that support Tap Tempo

- BigSky, Deco, DIG, Flint, Mobius, and Timeline

### Pedals that support external Favorite Switch

- Brigadier, Deco, DIG, El Capistan, Flint, Lex, Riverside, and Sunset

### Pedals that support an external Boost switch

- Riverside

# BigSky

## TAP TEMPO MODE SETUP

- 1 Press and hold the VALUE knob for 2 seconds to access the Globals menu.



- 2 Turn until the display reads EXP MD (expression mode).



- 3 Press the VALUE knob.



- 4 Turn until the display reads TAP.




**NOTE:** To switch back to Expression pedal operation, follow steps 1-3 above, and then turn the VALUE knob until the display reads PEDAL.

# Brigadier

## FAVORITE MODE SETUP

1 Set both toggles to the MIDDLE position.

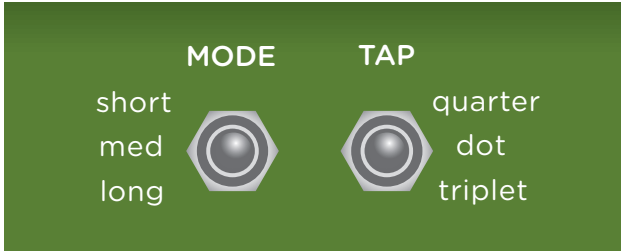

2 Power up holding BOTH footswitches.



To switch back to Expression pedal operation, set both toggles to the TOP position and power up holding both footswitches.

## How to save and access a Favorite preset:

1 Press and hold BYPASS on your Strymon pedal to save a new Favorite preset.




2 Press MiniSwitch to engage Favorite preset.



# Compadre

## FAVORITE MODE SETUP:

- 1 Press and hold the COMP footswitch at power up until both LEDs flash.

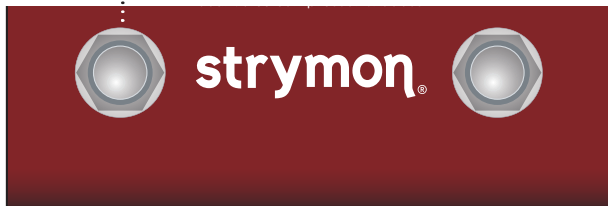

- 2 To enable FAV Mode for the **FAV/MIDI jack**, turn the BOOST knob fully to the left. The BOOST LED will light up **RED**.




- 3 Press the BOOST or COMP footswitch once again to store this setting and begin using Compadre.

## How to save and access a Favorite preset:

- 1 Press and hold the BOOST footswitch on Compadre to save a new Favorite preset.



- 2 Press MiniSwitch to toggle between the saved Favorite preset and the current state of knobs & switches.

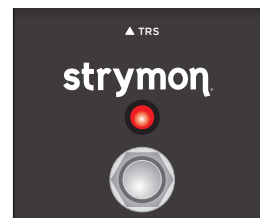

# Deco

## FAVORITE MODE SETUP

- 1 Power up holding BOTH footswitches.



- 2 While holding footswitches, turn the SATURATION all the way to the right.




### How to save and access a Favorite preset:

- 1 Press and hold TAPE SATURATION bypass on Deco to save a new Favorite preset.



- 2 Press MiniSwitch to toggle between the saved Favorite preset and the current state of knobs & switches.

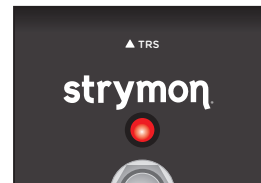

## TAP TEMPO MODE SETUP

With Deco set to Tap tempo mode use MiniSwitch to tap in your Lag Time. Tapping quarter notes sets the Lag Time to 8th notes.

- 1 Power up holding BOTH footswitches.



- 2 While holding footswitches, turn the SATURATION to the 12 o'clock position.







# DIG

## FAVORITE MODE SETUP

1 Set both toggles to the MIDDLE position.

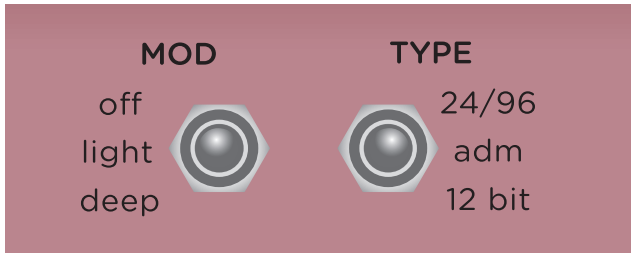

2 Power up holding BOTH footswitches.

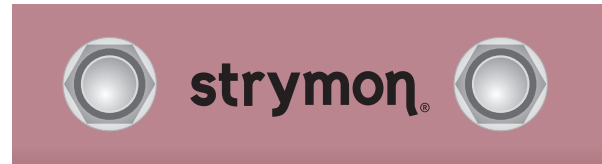

To switch back to Expression pedal operation, set both toggles to the TOP position and power up holding both footswitches.

### How to save and access a Favorite preset:

1 Press and hold BYPASS on your Strymon pedal to save a new Favorite preset.




2 Press MiniSwitch to toggle between the saved Favorite preset and the current state of knobs & switches.




## TAP TEMPO MODE SETUP

1 Set both toggles to the DOWN position.

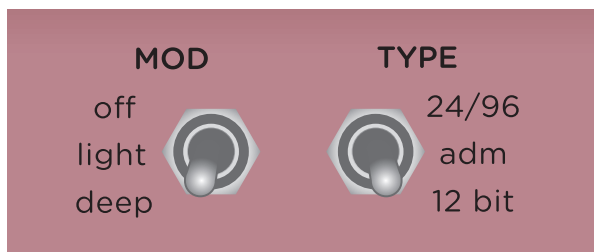

2 Power up holding BOTH footswitches.

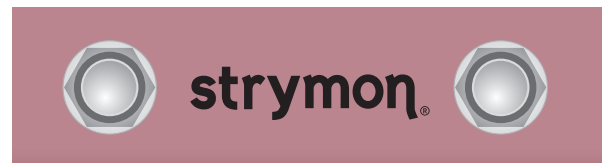


To switch back to Expression pedal operation, set both toggles to the TOP position and power up holding both footswitches.


# El Capistan

## FAVORITE MODE SETUP

1 Set both toggles to the MIDDLE position.

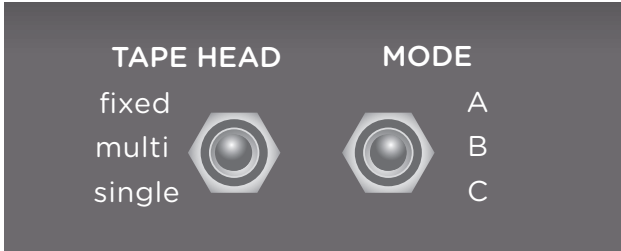

2 Power up holding BOTH footswitches.

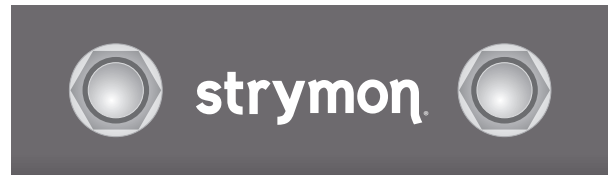

To switch back to Expression pedal operation, set both toggles to the TOP position and power up holding both footswitches.

## How to save and access a Favorite preset:

1 Press and hold BYPASS on your Strymon pedal to save a new Favorite preset.




2 Press MiniSwitch to toggle between the saved Favorite preset and the current state of knobs & switches.



# Flint

## FAVORITE MODE SETUP

1 Set both toggles to the MIDDLE position.

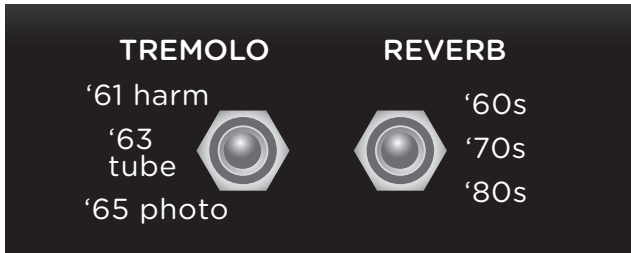

2 Power up holding BOTH footswitches.



To switch back to Expression pedal operation, set both toggles to the TOP position and power up holding both footswitches.

### How to save and access a Favorite preset:

1 Press and hold BYPASS on your Strymon pedal to save a new Favorite preset.




2 Press MiniSwitch to toggle between the saved Favorite preset and the current state of knobs & switches.



## TAP TEMPO MODE SETUP

1 Set both toggles to the DOWN position.

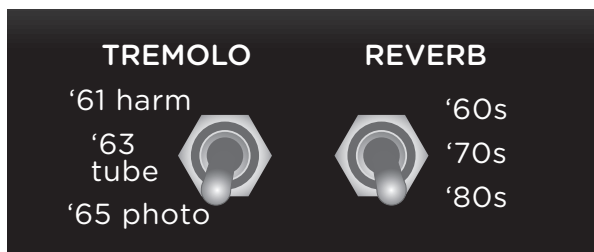

2 Power up holding BOTH footswitches.




To switch back to Expression pedal operation, set both toggles to the TOP position and power up holding both footswitches.


# Iridium

## FAVORITE MODE SETUP:

- 1 Press and hold the FAV footswitch at power up until both LEDs flash.

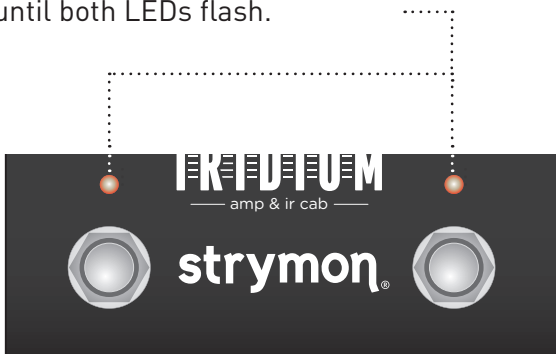

- 2 To enable Favorite In for the **EXP jack**, turn the LEVEL knob fully clockwise. The ON LED will light up **PURPLE**.

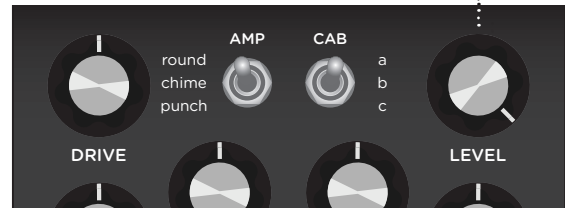


- 3 Press the FAV or ON footswitch once again to store this setting and begin using Iridium.

## How to save and access a Favorite preset:

- 1 Press and hold FAV footswitch on Iridium to save a new Favorite preset.



- 2 Press MiniSwitch to toggle between the saved Favorite preset and the current state of knobs & switches.

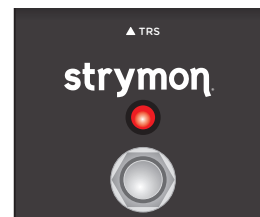

## Lex

### FAVORITE MODE AND EXTERNAL SPEED SWITCH MODE SETUP

Power up holding BOTH FOOTSWITCHES.



While holding both footswitches:



- Turn TOPMOST LEFT KNOB full clockwise to use MiniSwitch as a favorite preset select switch.



- Turn TOPMOST LEFT KNOB to 12 o'clock to use MiniSwitch as an external speed switch.

\*To switch back to Expression pedal operation, while powering up hold both footswitches, and turn the TOPMOST LEFT KNOB full counterclockwise.

How to save and access a Favorite preset:

- 1 Press and hold BYPASS on your Strymon pedal to save a new Favorite preset.



- 2 Press MiniSwitch to toggle between the saved Favorite preset and the current state of knobs & switches.



## Mobius

### TAP TEMPO MODE SETUP


- 1 Press and hold the VALUE knob for 2 seconds to access the Globals menu.



- 2 Turn until the display reads EXP MD (expression mode).



- 3 Press the VALUE knob.

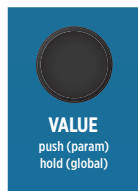

- 4 Turn until the display reads TAP.



**NOTE:** To switch back to Expression pedal operation, follow steps 1-3 above, and then turn the VALUE knob until the display reads PEDAL.


## Riverside

### BOOST SWITCH SETUP:

- 1 Press and hold the FAVORITE footswitch at power up until both LEDs flash.



- 2 To enable the BOOST switch for the **BOOST jack**, turn the DRIVE knob counter-clockwise. The FAVORITE LED will light up **GREEN**.

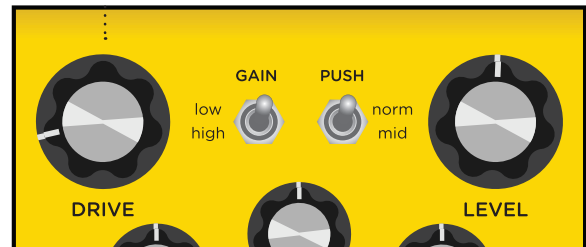


- 3 Press the ON or FAVORITE footswitch once again to store this setting and begin using Riverside.

### FAVORITE MODE SETUP:

- 1 Press and hold the FAVORITE footswitch at power up until both LEDs flash.



- 2 To enable Favorite In for the **EXP jack**, turn the LEVEL knob fully clockwise. The ON LED will light up **RED**.

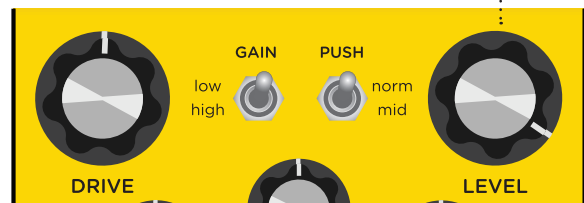

- 3 Press the ON or FAVORITE footswitch once again to store this setting and begin using Riverside.

## Riverside (cont.)

### How to save and access a Favorite preset:

- 1 Press and hold FAVORITE footswitch on Riverside to save a new Favorite preset.
- 2 Press MiniSwitch to toggle between the saved Favorite preset and the current state of knobs & switches.






# Sunset

## FAVORITE MODE SETUP:

- 1 Press and hold the A footswitch at power up until both LEDs flash.



- 2 To enable Favorite In for the **FAV jack**, turn the A LEVEL knob fully clockwise. The A LED will light up **ORANGE**.

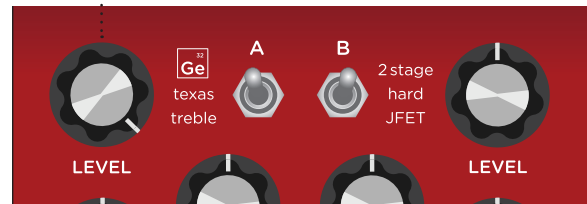

- 3 Press the BOOST or COMP footswitch once again to store this setting and begin using Sunset.

## How to save and access a Favorite preset:

- 1 Press and hold the A footswitch on Sunset to save a new Favorite preset.



- 2 Press MiniSwitch to toggle between the saved Favorite preset and the current state of knobs & switches.



# Timeline

## TAP TEMPO MODE SETUP

1 Press and hold the VALUE knob for 2 seconds to access the Globals menu.



2 Turn until the display reads EXP MD.



3 Press the VALUE knob.



4 Turn until the display reads TAP.



**NOTE:** To switch back to Expression pedal operation, follow steps 1-3 above, and then turn the VALUE knob until the display reads PEDAL.


# Volante

## TAP TEMPO MODE SETUP

- 1 Press and hold TAP footswitch while connecting power to the Volante.



- 2 Turn ECHO LEVEL counter-clockwise until the TAP LED lights up **ORANGE**.

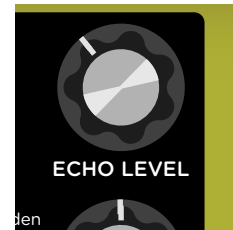

- 3 Press any footswitch once again to store this setting and begin using Volante.

**NOTE:** To switch back to Expression pedal operation, follow steps 1 and 2 above, and then turn the ECHO LEVEL knob fully counter-clockwise until the FAV LED lights up **GREEN**.

## Specification

|            |                                  |
|------------|----------------------------------|
| Dimensions | 2.25" deep x 2" wide x 1.8" tall |
| Cable      | 1/4" TRS (tip / ring / sleeve)   |

## Strymon Non-Transferrable Limited Warranty

### Warranty

Strymon warrants the product to be free from defects in material and workmanship for a period of two (2) years from the original date of purchase when bought new from an authorized dealer in the United States of America or Canada. If the product fails within the warranty period, Strymon will repair or, at our discretion, replace the product at no cost to the original purchaser. Please contact your dealer for information on warranty and service outside of the USA and Canada.

### Exclusions

This warranty covers defects in manufacturing discovered while using this product as recommended by Strymon. This warranty does not cover loss or theft, nor does the coverage extend to damage caused by misuse, abuse, unauthorized modification, improper storage, lightning, or natural disasters.

### Limits of Liability

In the case of malfunction, the purchaser's sole recourse shall be repair or replacement, as described in the preceding paragraphs. Strymon will not be held liable to any party for damages that result from the failure of this product. Damages excluded include, but are not limited to, the following: lost profits, lost savings, damage to other equipment, and incidental or consequential damages arising from the use, or inability to use this product. In no event will Strymon be liable for more than the amount of the purchase price, not to exceed the current retail price of the product. Strymon disclaims any other warranties, expressed or implied. By using the product, the user accepts all terms herein.

### How to Obtain Service Under this Warranty

For North American customers: Contact Strymon through our website at [strymon.net/support](http://strymon.net/support) for Return Authorization and information. Proof of original ownership may be required in the form of a purchase receipt.

For International Customers: Contact the Strymon dealer from which the product was purchased from in order to arrange warranty repair service.

Strymon® is a division of Damage Control®, LLC.